


1. Identification / recognition

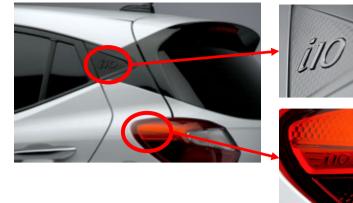




2. Immobilisation / stabilisation / lifting



Pull up the parking brake as far as possible

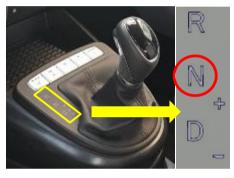

For AMT (Automated Manual Transmission) vehicles, move the shift lever to the N position.

3. Disable direct hazards / safety regulations

☑ Access to the battery





Pull the release lever to unlatch the hood. The hood should pop open slightly.



1) Turn the ignition switch off



Raise the hood slightly, push the secondary latch up (1) inside of the hood center and lift the hood (2)



2 Disconnect the negative(-) terminal

12V battery in the engine compartment

(3) Disconnect the

positive(+) terminal

ID No.	Version No.	Version date	Page
NLH-AC3-RSI-02-202008	02	08/2020	2 of 3

